



Instructions For Use of Rotary Knife & Mat

Before use:

Leave flat in a warm room overnight. Mat may need cleaning (see section below).

During use:

Slide blade-cover back to uncover blade. If the blade is new, adjust the screw on the knife to allow the blade to rotate when cutting. If the blade is used and has developed nicks in the edge, tighten the screw on the knife to prevent the blade from rotating when cutting. When blade becomes dull in that particular area, loosen screw and adjust to new position on blade. The blade is numbered to help you. Do not use any more pressure on knife than is required to cut the fabric. This will add to the life of the blade and mat.

After use:

Care for rotary knife as any other precision cutting tool or scissors. Change blade often to maximize the efficiency of the rotary knife and prevent damage to mat. Clean with mild soap and water or glass cleaner will help minimize static cling of dust on mat. Change knife blade often to prevent damage to mat. The mat is made of a Hi Tech plastic that offers maximum toughness and yet has a rubber-like grip so the fabric will slide less while you cut.